


LUFTKISSENMÄHER GX340C----C

TYPE 1

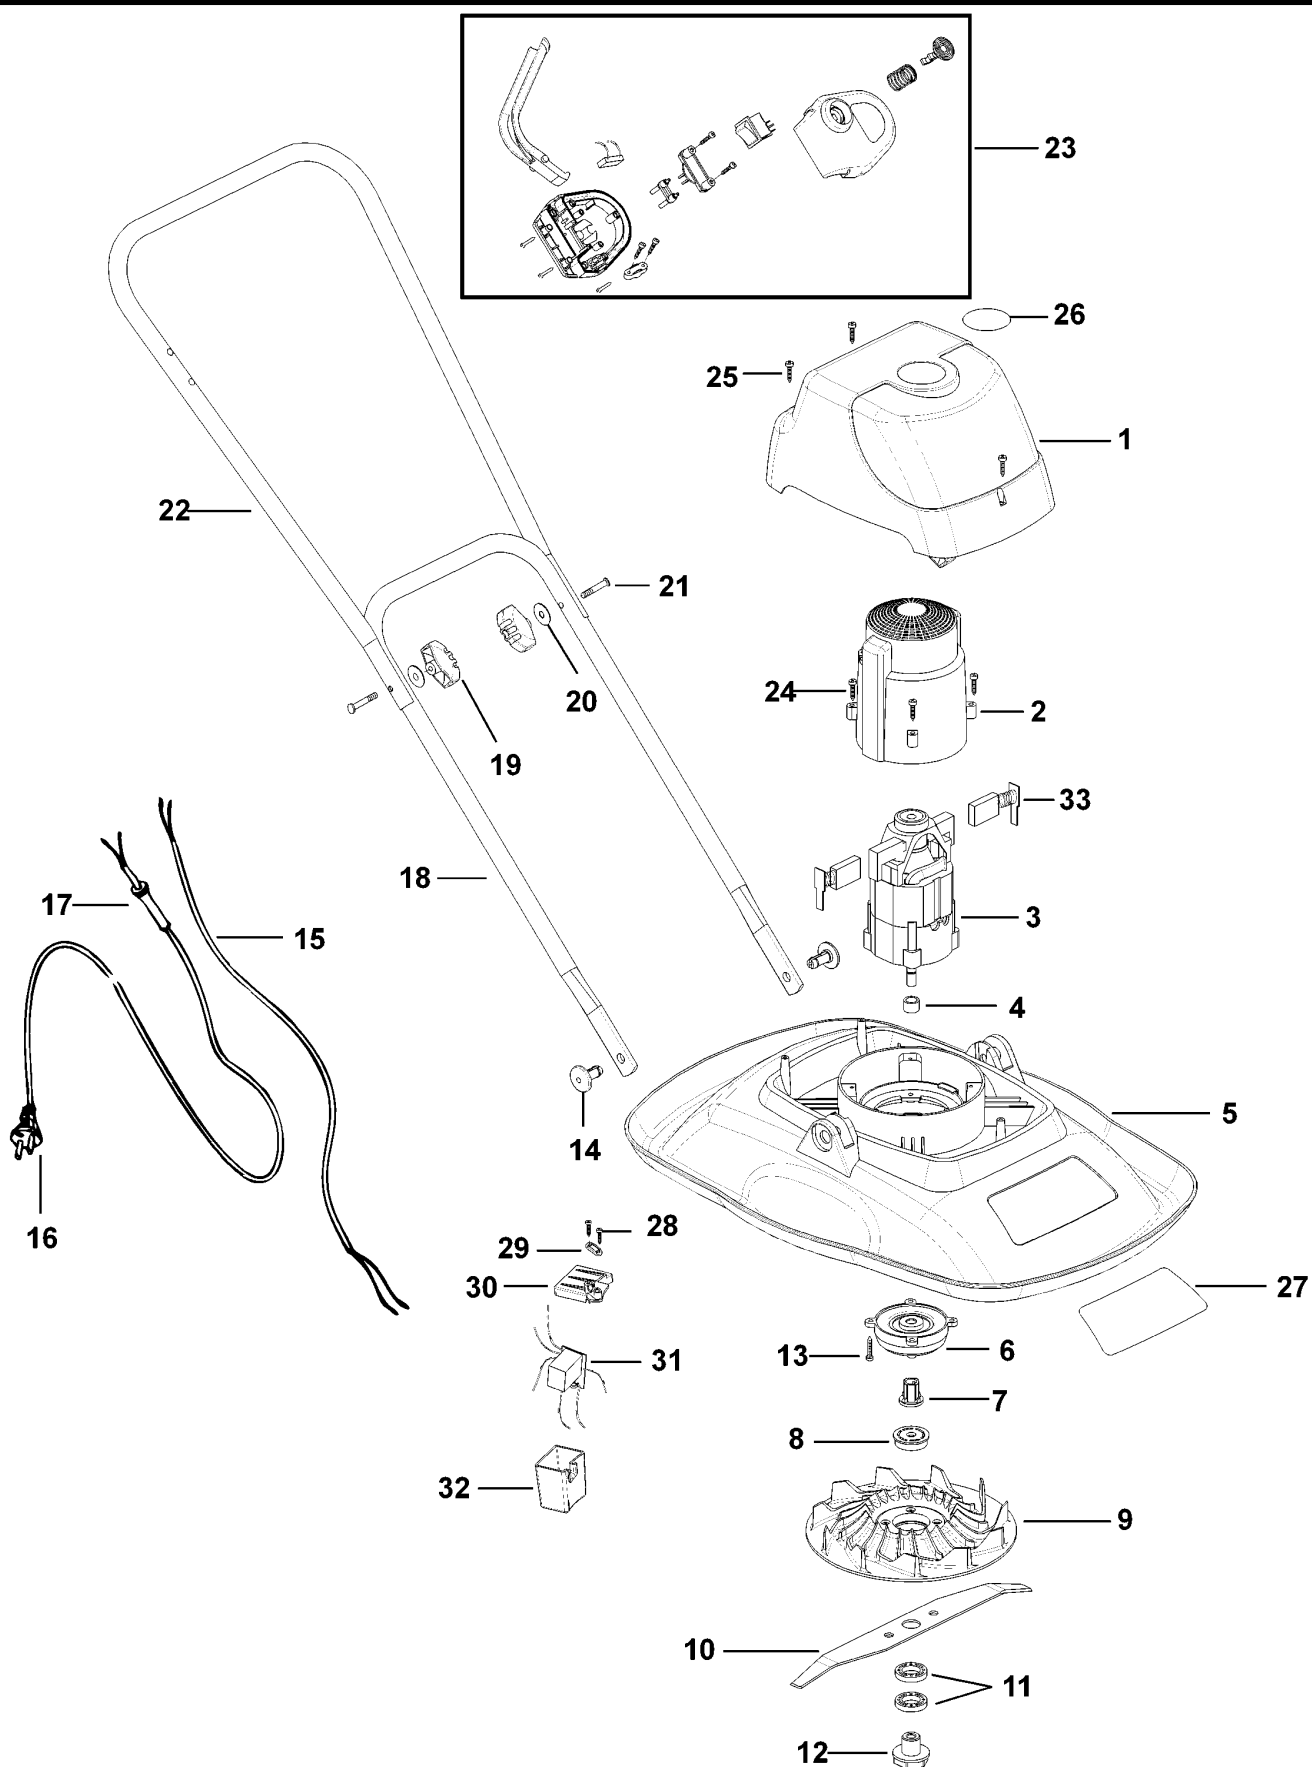

LUFTKISSENMÄHER

GX340C----C

TYPE 1



Pos. Nr	Ersatzteilnummer	Beschreibung	Preis	Variants
1	1	1002831-00	GEHÄUSEABDECKUNG	
2	1	1002832-00	MOTORABDECKUNG	
3	1	1002833-00	MOTOR ZSB	
4	1	1002834-00	KUGELLAGER	
5	1	1002835-00	CHASSIS	
6	1	1002836-00	BREMSE	
7	1	1002837-00	KUPPLUNG	
8	1	1002838-00	UNTERLEGSCHEIBE	
9	1	1002839-00	LÜFTER	
10	1	1002840-00	MESSER	
11	2	1002841-00	UNTERLEGSCHEIBE	
12	1	1002842-00	BOLZEN	
13	4	1002843-00	SCHRAUBE	
14	2	1002844-00	BEFESTIGER	
15	1	1002845-00	MOTORKABEL	
16	1	1002846-00	STECKER	B1
17	1	1002847-00	KABELTUELLE	
18	1	1002848-00	UNTERER GRIFF	
19	2	1002849-00	KNOPF	
20	2	1002850-00	UNTERLEGSCHEIBE	
21	2	1002851-00	BOLZEN	
22	1	1002852-00	OBERER GRIFF	
23	1	1002853-00	SCHALTER ZSB	
24	4	1002854-00	SCHRAUBE	
25	3	1002855-00	SCHRAUBE	
26	1	1002856-00	AUTO-STOP-SCHILD	
27	1	1002857-00	AUFKLEBER	B1
28	2	1002858-00	SCHRAUBE	
29	1	1002859-00	KLAMMER	
30	1	1002860-00	ABDECKUNG	
31	1	1002861-00	RELAIS/SCHUTZ	B1
32	1	1002862-00	GEHAEUSE	
33	1	1002863-00	KOHLEKIT	