



STICHSÄGE

KS633E----C

TYPE 3



Pos. Nr	Ersatzteilnummer	Beschreibung	Preis	Variants
1	1	571299-17	MOTOR ZSB	
2	1	580151-01	GEHAEUSEPAAR	FIRE STORM RED
4	1	809483-04	SCHALTER	
5	1	368329-00	PCB	
6	1	770235	SCHUTZ	
7	1	330080-03	KABELSATZ (EURO)	B1
7	1	330080-03	KABELSATZ (EURO)	DE
7	1	330080-03	KABELSATZ (EURO)	QS
7	1	330060-53	KABELSATZ	GB
7	1	330060-53	KABELSATZ	XD
7	1	330080-05	KABELSATZ	CH
7	1	330080-06	KABELSATZ	XE
8	1	369328	REGLER	
9	1	370282-00	FESTSTELLER ZSB	
10	1	748158	FEDER	
11	2	370966	UNTERLEGSCHEIBE	
12	2	847709	FEDER	
13	2	372523	KOHLE	
14	2	846076	KOHLEKASTEN	
15	1	830393	LITZE	
16	1	372828	LITZE	
17	2	828446	DROSSEL ZSB	
18	1	369620	MUTTER	
19	1	368564	GETR.GEH.	
20	1	368562	GETRIEBE	
21	4	891024	SCHRAUBE	
22	1	813480	ROLLER	
23	1	810897	KUGELLAGER	
24	1	370164-03	SCHAFT	
25	1	810893	KUGELLAGER	
26	1	847216	DICHTUNG	
27	1	371951	FEDER RECHTS	
28	1	371950	FEDER LINKS	
29	2	370167	SCHRAUBE	
30	1	368587	ABDECKUNG	
31	1	369008	SCHUTZ	
32	1	370584	SCHUTZ	
33	1	580121-00	TYPENSCHILD	
34	1	368375-01	HALTERUNG ZSB	
35	1	368857-00	KLAMMER	
36	2	376409	SCHRAUBE	
37	1	369304-00	SCHUH ZSB	
39	1	581096-00	KLAMMER	
40	1	370169	PLATTE	
41	2	370170	SPRENGRING	
42	1	571131-00	TEILEPAKET (SATZ)	
43	1	370168-04	ANTRIEB	
44	1	581098-02	KLEMME ZSB	
45	9	747329	SCHRAUBE	
47	2	812171	SCHRAUBE	