



ERSATZTEILLISTE


Laubsauger ES-337SP mit Schaltzug

ECHO-Motorgeräte Vertrieb Deutschland GmbH Otto-Schott-Str. 7

72555 Metzingen

Telefon 07123-1091 Telefax 07123-2589 http://www.echo-shop.de email:info@echo-shop.de



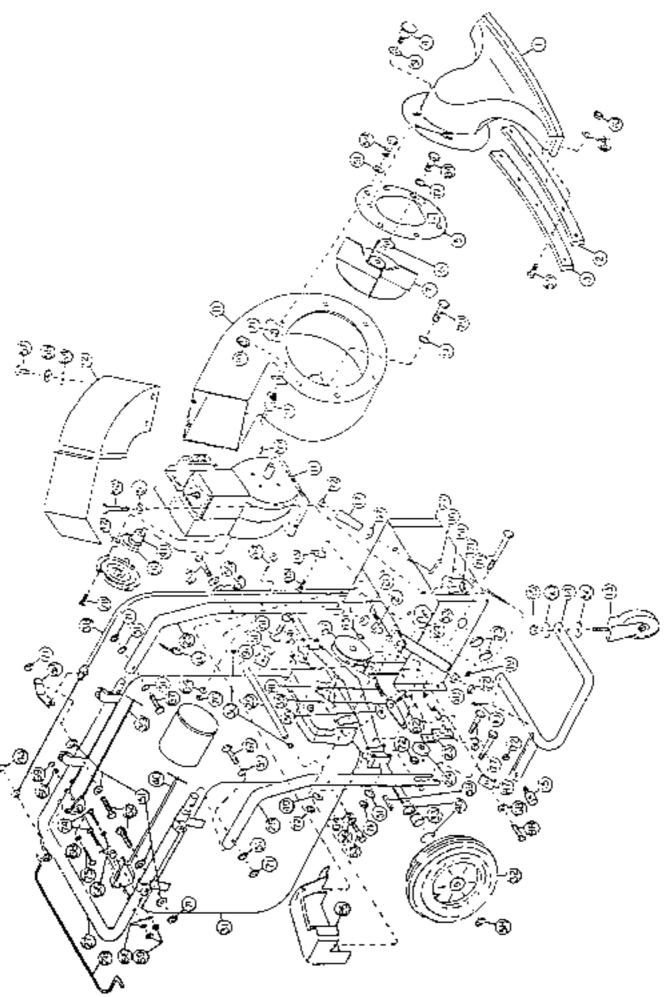



Key	.Part No.	Ωιγ.	Description	Xey	Part No.	Ωty.	Description
1	9A-D2584	1	Intake Nozzle Assy.	47	X-1693	ı	3/8 I.D. Nylon Spacer
Ž	9-B2105	ì	Rubber Scraper	48	9-A2555	1	Tube Bracket
3	9-B2106	ì	Retainer	45	L-64	5	3/8 Flat Washer
4	9-A2550	ī	Nozzle Knob	50	L 64A	2	I/2 Flat Washer
Ś	9A-D2545	1	Adaptor Plate Assy.	51	L-99	28	5/16 Flat Washer
6	9-AZ122	1	Impuller Spacer	52	L-127	1	5/16-18 x t 1/2 HHCS
7	9A-DZ430	í	Impeller Assy.	53	1131B	3	.193 x 3/4 Cotter Pin
8	9A-C2538	1	Lopeller Housing Assy.	54	1-307	7	5/16-18 x 5/8 HHCS
9	9A-2575	1	Switch Assy.	55	L-172	5	1/4-20 x 3/4 HHCS
16	X-1574	2	1/8 Dia.x 1 3/4 Cotter Pin	56	X-1000	6	1/4 Split Lock Washer
	9-250Z	1	Engine	57	X-1001	4	1/4-20 x 1/2 HHCS
12	S8E2G-A ?	1	Elbow Assy.	5 8	X-1003	2	3/4 "E Key" Retainer
13	9-A2517	1	Caster Assy.	59	X-1009	3	3/16 So, x 1 7/8 Key
14	9A-C2537	1	Caster Tube Assy.	60	X-1020	1	3/8-16 ± 1 3/4 HHCS
15	9A-2441	ı	Pivot Bolt	61	X-1025	6	5/16 Split Lock Washer
16	9-B2526	1	Height Adjustment Rod	67	X-1028	2	5/16-18 x 2 RHCS
17	9-A2541	1	Height Adjustment Knob	63	X-1072	Z	1/4-20 x 1 3/4 HHCS
18	X-A2016	Ţ	3/\$ I.D. Rod Collar	64	X-1099	12	1/4 Flat Washer
. 5	X-5018	1	1/4-20 x 1/4 Set Scraw	65	X-1353	1	1/Z-13 Center-Loc Nut
7.3	9-AZ639	1	Shoolder Dushing	65	X-2419	5	#10 Flat Washer
21	1-A2666	1	Spacer	67	X-2545	2	5/16-15 x 2 1/4 ENGS
32	9A-D2536	1	Frame Assy.	68	X-1617	3	#10 x 3/4 Flat Washer
23	9A-A2528	1	Idler Pulley Assy.	69	X-1620	3	10-24 Nylon Nut
	4-A102\$9	1	Idier Pulley	70	X-7621	6	1/4-20 Nyloc Nut
25	9-02519	1	Left Upright Tube	71	X-1622	\$#	5/16-13 Nyloc Nut
26	9-D2520	1	Right Upright Tube	72	X-1523	8	3/8-16 Nyloc Nut
27	9-DZ518	1	Steering Handle	73	X-1683	2	1.275 x Z Nylon Flatwashe
28	9A-C2531	1	Clutch Bail Assy.	74	X-1683	Ş	10-24 × 2 HAMS
29	9-A 2495	ı	Support Tuba	75	X-16E4	1	10-24 x 2 1/4 HHMS
ند	X-1567	2	Tube Nuts 1/4-20	76	X-1685	4	3/8-16 x 2 3/4 HHCS
31	9A-2572	1	Debris Bag Assy.	77	X-1686	4	5/16-18 x 2 1/2 HHCS
32	9-254Z	2	Wheel/Tire Assy.	78	X-1687	•	10-32x5/8 Washer Hd-Bolt
31	9-A2509	Z	Wheel Spacer	79	X-1689	4	5/16-74 x 1 1/4 HHC5
34	9-2535	3	fracsaxle	80	X-1689	4	7" Black Wire Tie
35	9-AZ510	-	Shift Lever	27	1-1465	1	Return Spring
36	9-A2549	j	Shift Lover Spacer	82	X-1691	1	1/4-29×1/2 Weether Hd. Bo)
37	9-B2525	1	Input Pulley	83	X-1692	2	Cable Clamp
38	9-A2526	1	Clutch Cable Assy.	84	x-1694	1	5/16-24 x 1 1/2 HHCS
39	9-A2557	1	Throttle Control Assy.	85	X-1695	1	10-24x5/8 Self Tapping Sc
40	9-A2492	1	Shift Control Assy.	86	9-2559	1	Transaxle/Belt Cover
61	9A-Z5Z4	1	Engine Pulley Assy.	87	X-1615	2	10-24 Tinneyman Nut Clip
4 2	9-AZ540	4	Starter Spacers	88.	X-1659	2	10-24 x 5/8 Slotted Bolt
43	X-1348	1	5/16 LD. Push-on Retainer	69		1	Plastic Nut
44	X-1234A	1	1/4-20 x 1 1/4 Eye Bolt	90	9-2503	1	Drive Belt
45	X-1030	1	5/8 Snap Ring	91	9-2569	T	Shift Cable Clamp
46	X-A1048	1	3/4 I.D. 2 1 1/4 O.D. Flatwasher				

