


FIGURE 1

GENERAL ASSEMBLY

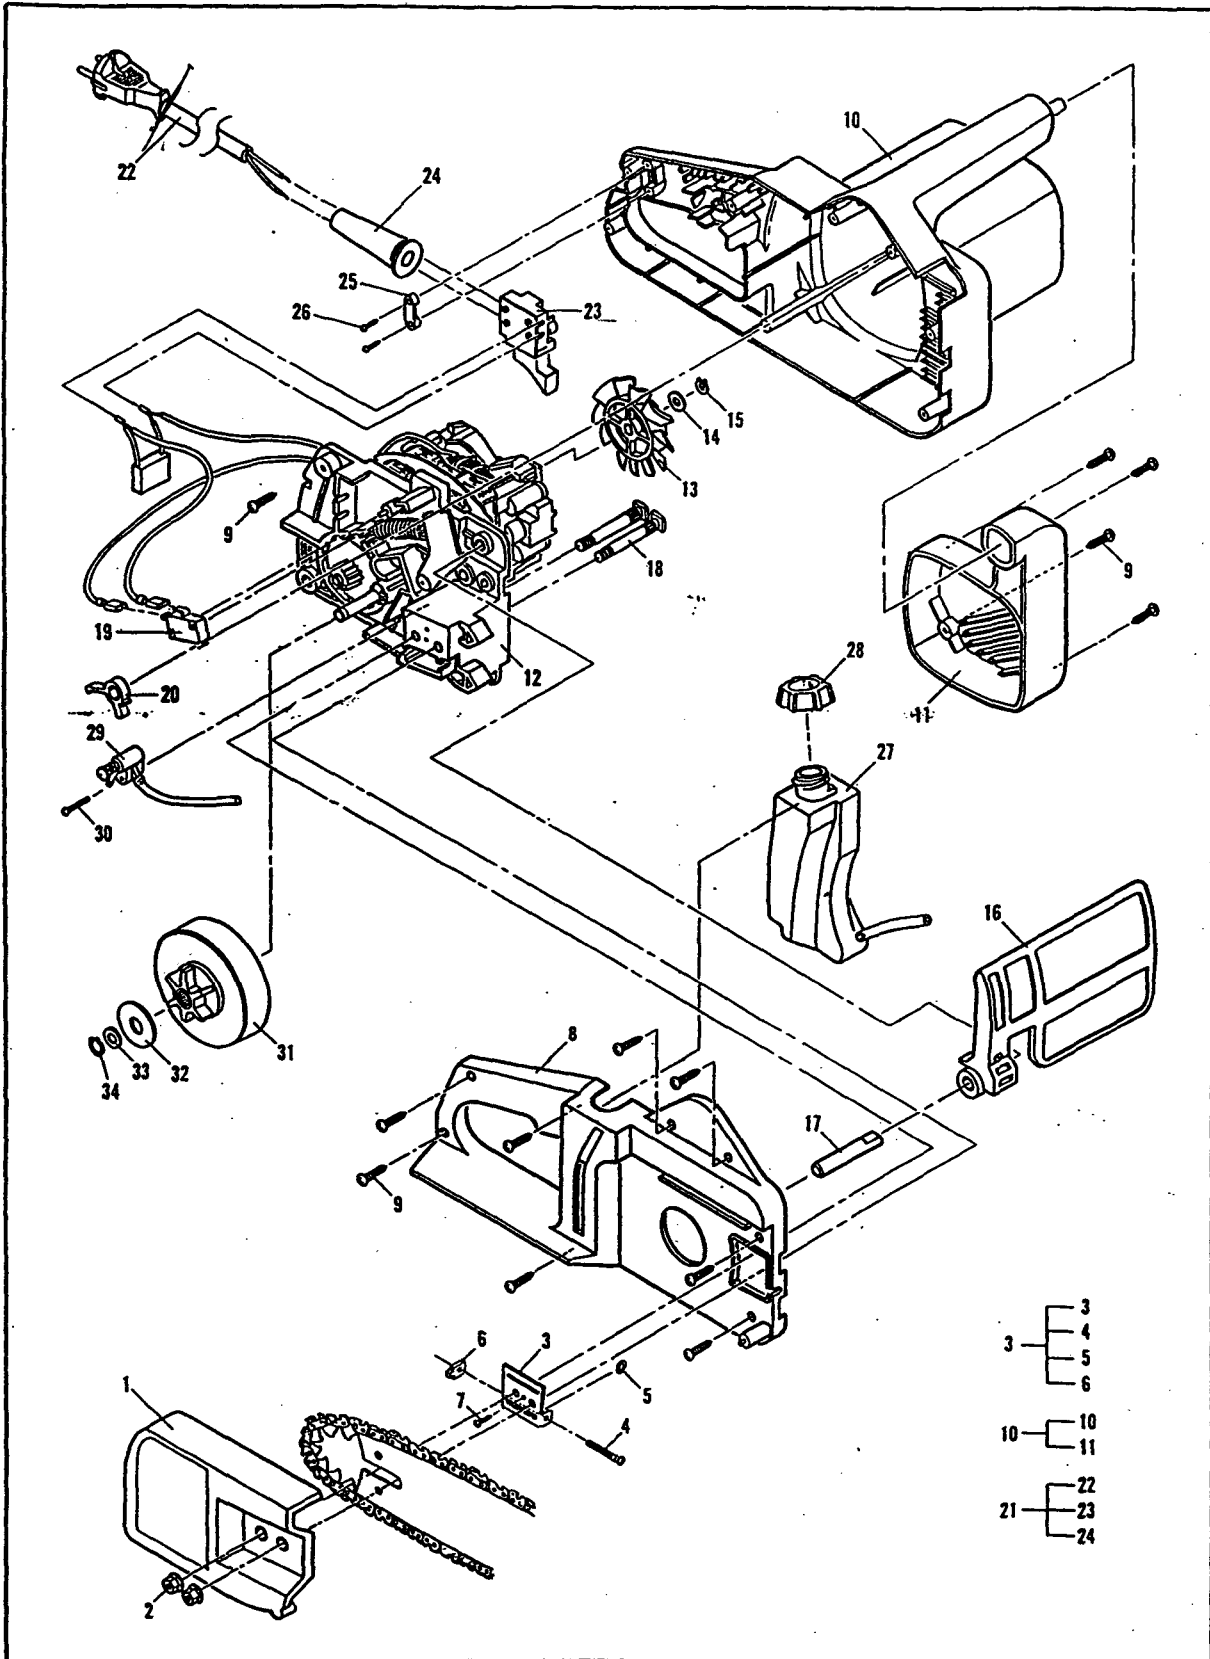

GENERAL ASSEMBLY

FIGURE 1

ITEM NO.	PART NUMBER	DESCRIPTION	UNITS PER ASY.
1	40800-00	Sprocket Cover	1
2	22279-00	Nut, Hex 1/4-28	2
3	40817-96	Plate, Bar Tension	1
4	223088	Screw, Adjusting	1
5	110907	Ring, Retaining	1
6	40900-99	Nut, Bar Adjusting	1
7	15140-99	Screw, 4 x 5/8 Ph Pn Hd	1
8	40806-02	① Housing, Right (Yellow)	1
	40806-04	② Housing, Right (Blue)	1
	40806-12	③ Housing, Right (Grey)	1
9	15031-99	Screw, 8 x 3/4 Ph Pn Hd	13
10	40805-54	① Housing & End Cover, Left (Yellow)	1
	40805-55	② Housing & End Cover, Left (Blue)	1
	40805-60	③ Housing & End Cover, Left (Grey)	1
11	40808-00	Cover, End	1
12	40929-50	Motor/Chassis Assembly	1
13	22209-01	Fan, Cooling	1
14	12775-00	Washer	1
15	36017-99	Ring, Retaining, Cooling Fan	1
16	40807-96	Brake Lever	1
17	40835-00	Axle, Brake Lever	1
18	40815-00	Bolt, Bar	2

ITEM NO.	PART NUMBER	DESCRIPTION	UNITS PER ASY.
19	40933-00	Micro Switch	1
20	40925-11	Lever, Micro Switch	1
21	12353-96	④ Cord/Switch Assembly (UK)	1
	12354-96	⑤ Cord/Switch Assembly (Euro)	1
	12355-96	⑥ Cord/Switch Assembly (Swiss)	1
	12356-96	⑦ Cord/Switch Assembly (Italy)	1
22	12353-00	④ Cord Assembly (UK)	1
	12354-00	⑤ Cord Assembly (Euro)	1
	12355-00	⑥ Cord Assembly (Swiss)	1
	12356-00	⑦ Cord Assembly (Italy)	1
23	40931-00	Switch	1
24	12228-01	Cord Protector	1
25	00498-00	Clamp, Cord	1
26	15145-99	Screw, 6 x 1/2 Ph Pn Hd	2
27	40818-96	Oil Tank/Tubing/Filter Assembly	1
28	40820-02	Cap, Oil Tank	1
29	40824-96	Oil Pump/Tubing Assembly	1
30	15117-99	Screw, 6 x 1 Ph Pn Hd	1
31	40810-96	Brake Drum/Sprocket Assembly	1
32	22257-00	Washer, Flat	1
33	40814-00	Washer, Sprocket	1
34	22237-00	Ring, Retaining, Sprocket	1

- ① 45333-50
- 45333-89
- 45333-90
- 45333-91
- ② 45334-50
- 45334-90

- ④ 45333-91
- 45339-91
- ⑤ 45333-50
- 45334-50
- 45339-50
- ⑥ 45333-89

4092542