


CARAVAN

12-100 E

1992

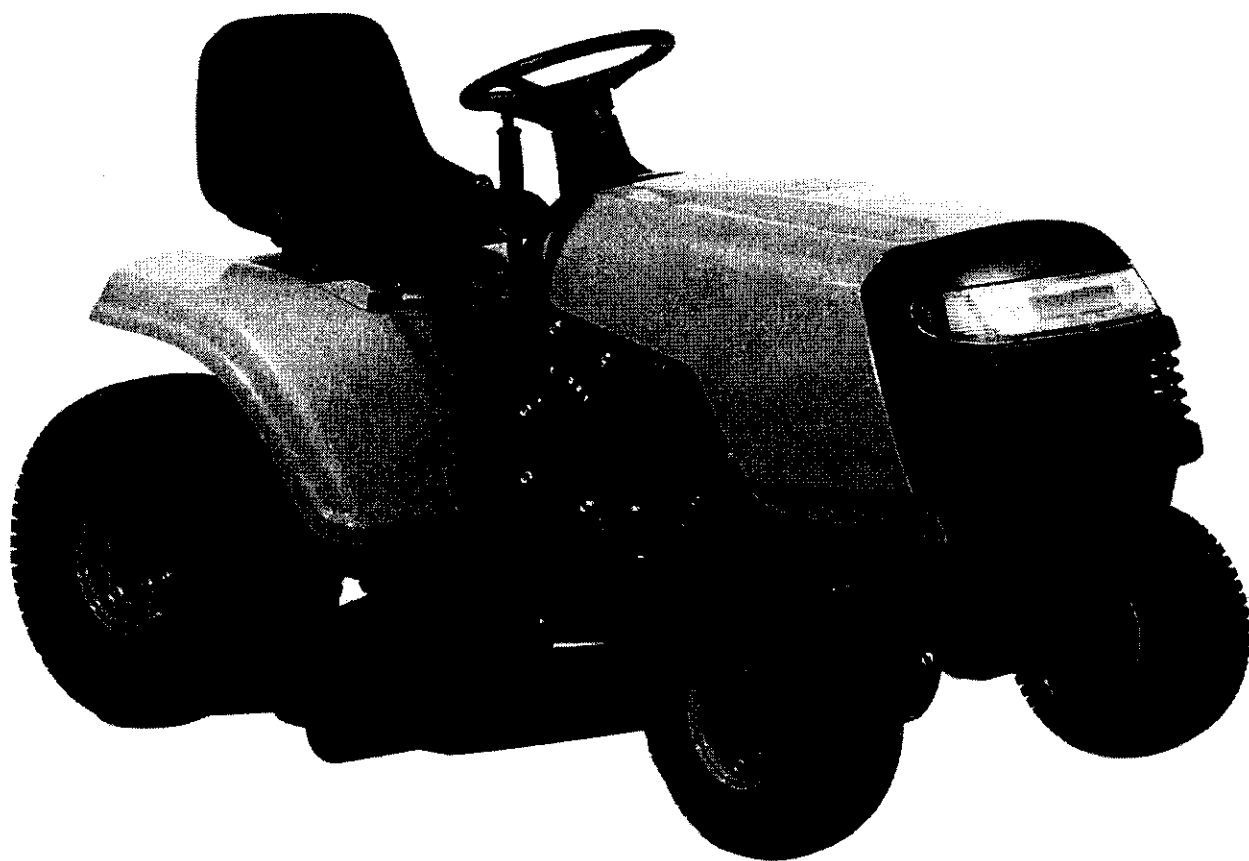


PARTNER

4-pyörä ohjauk

7		1992:1
		12-100E

Prod.nr: 996 50 78-10
 Engine: B & S 281707 Type: 0205 Trim: 01
 Transaxel: Peerless 930-036


SPAREPARTS
 107 25 05-63

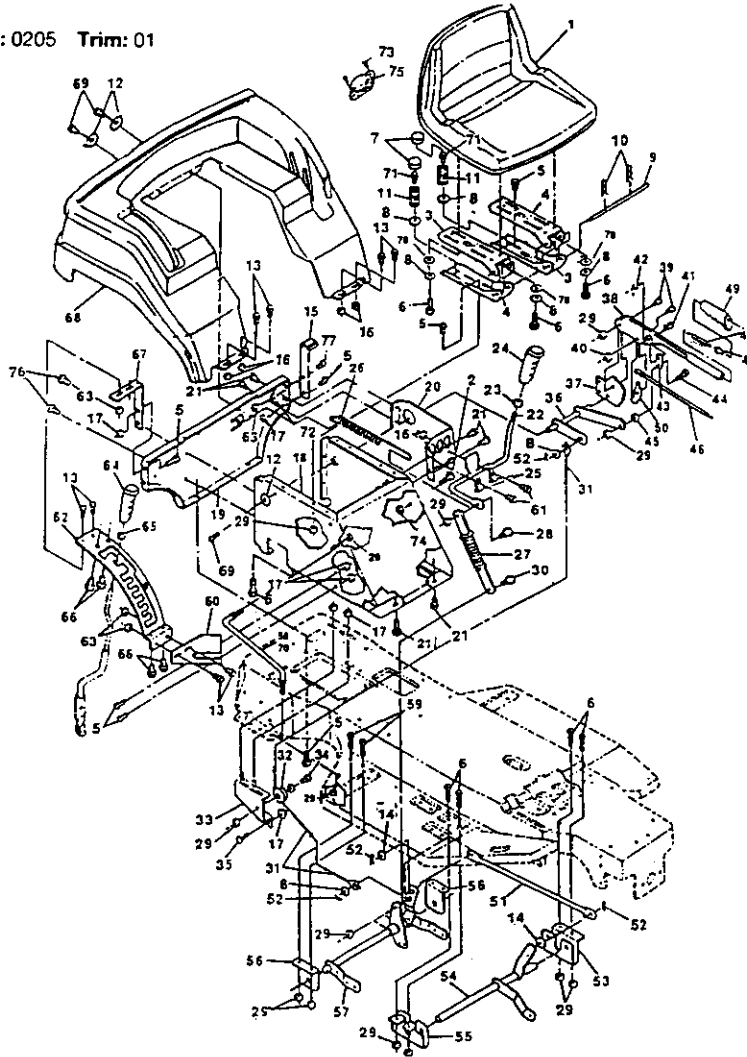

Key No.	Part No.	Description
1	5065562-01	Seat
2	5331221-88	Screw, Hex, 3/8-16 x 2-1/4 In.
3	5333054-24	Channel, Seat L. H.
4	5333028-97	Channel, Seat R. H.
5	5330560-30	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.
6	5331220-07	Screw, Tapite, 5/16-18 x 3/4 In.
7	5330569-07	Seat Spring Cover
8	5331203-93	Washer, Flat, 11/32 In.
9	5333044-81	Rod, Seat Support
10	5330363-68	Hair Pin, .073 Dia. x 1.13 In.
11	5333055-20	Seat Spring
12	7341163-01	Washer, Flat, 9/32 In.
13	5331800-18	Screw, Hx Hd, 1/4-20 x 5/8 In.
14	5332745-17	Flatwasher, 13/32 In.
15	5333053-79	Bracket, Support, L. H.
16	5330015-02	Nut, Lock, 1/4-20 Thd.
17	5330552-73	Nut, Hx, Wd Fl, Lk 5/16-18 Thd
18	5333220-68	Seat Support
19	5333220-69	Support, Fender & Seat
20	5333022-08	Bracket, Support Engage
21	5330354-97	Screw, Hx Wshr Hd Tap, 5/16-18 x 1/2 In.
22	5333073-85	Assembly Bracket and Engage-ment hand
23	5331202-38	Nut, Hx Ctrk, 1/2-13 Thd.
24	5333047-29	Handle, Lift
25	5333021-97	Clip

Key No.	Part No.	Description
26	5333053-06	Spring, Tension
27	5333044-48	Assembly, Spring Cartridge
28	5333059-89	Shoulder Bolt, 7/16 In.
29	5330014-98	Nut, Hx Ctrk, 5/16-18 Thd.
30	5330250-07	Shoulder Bolt, 5/16-18 Thd.
31	5333032-27	Cable, Deck Lift
32	5330483-06	Pulley
33	5333032-30	Assembly, Pulley Bracket
34	5333055-22	Shoulder Bolt, 5/16-18 Thd.
35	5331262-11	Bolt, Carriage, 5/16-18 x 5/8 In.
36	5333022-05	Assembly, Upper Shaft
37	5333023-83	Quadrant, Upper Shaft
38	5330583-32	Lift Lever
39	5333001-71	Shoulder Bolt, 5/16-18 Thd.
40	5330441-08	Nut, Hx Wd Fl Lk 5/16-18 Thd.
41	5333003-10	Clevis Pin
42	5333003-11	E-Ring
43	5333023-57	Link
44	5330361-49	Shoulder Bolt, 5/16-18 Thd.
45	5330456-02	Washer, Flat
46	5330563-30	Actuator Rod
47	5330583-26	Spring, Height Adjust
48	5330583-25	Knob, Height Adjust
49	5333047-30	Handle, Lift
50	5333012-39	Pawl, Height Adjust
51	5333023-80	Tie Rod
52	5331212-22	Cotter Pin
53	5333023-38	Bracket, L. H. Front Hanger

Key No.	Part No.	Description
54	5333023-79	Assembly, Front Lift Shaft
55	5333049-67	Bracket, R. H. Front Hanger
56	5333023-60	Bracket, Hanger
57	5333022-06	Assembly, Rear Lift Shaft
58	5333193-87	Support, Foot Rest Stiffener LH
59	5331202-28	Screw, Hx Hd, 5/16-18 x 5/8 In.
60	5333053-81	Support, Shift Plate
61	5331800-16	Screw, 1/4-20 x 1/2 In.
62	5333053-82	Quadrant
63	5330513-35	Nut, Hx, Wd Fl Lk, 1/4-20 Thd.
64	5333047-28	Handle
65	5331203-77	Nut, Hx 3/8-16 Thd.
66	5333003-02	Screw, Hx Hd, Tap #10 x 1/2 In.
67	5333053-80	Fender Support, R. H.
68	5333031-52	Fender
69	5339953-38	Screw, Hx, Wshr Hd, Tap 1/4-20 x 5/8 In.
70	5333193-88	Support, Foot Rest Stiffener RH
71	5334518-14	Screw, 5/16-18 x 5/8 In.
72	5331203-85	Flatwasher
73		Screw, 1/4-20 x 3/8 In.
74	5332711-90	Nut, Hex Keps, 3/8-16 Thd.
75	5065560-01	Seat Switch
76	5330506-34	Screw, Tap, 5/16-18 x 7/8 In.
77	8747604-12	Screw, 1/4-20 X 3/4 In.
78	5331203-68	Split Lockwasher

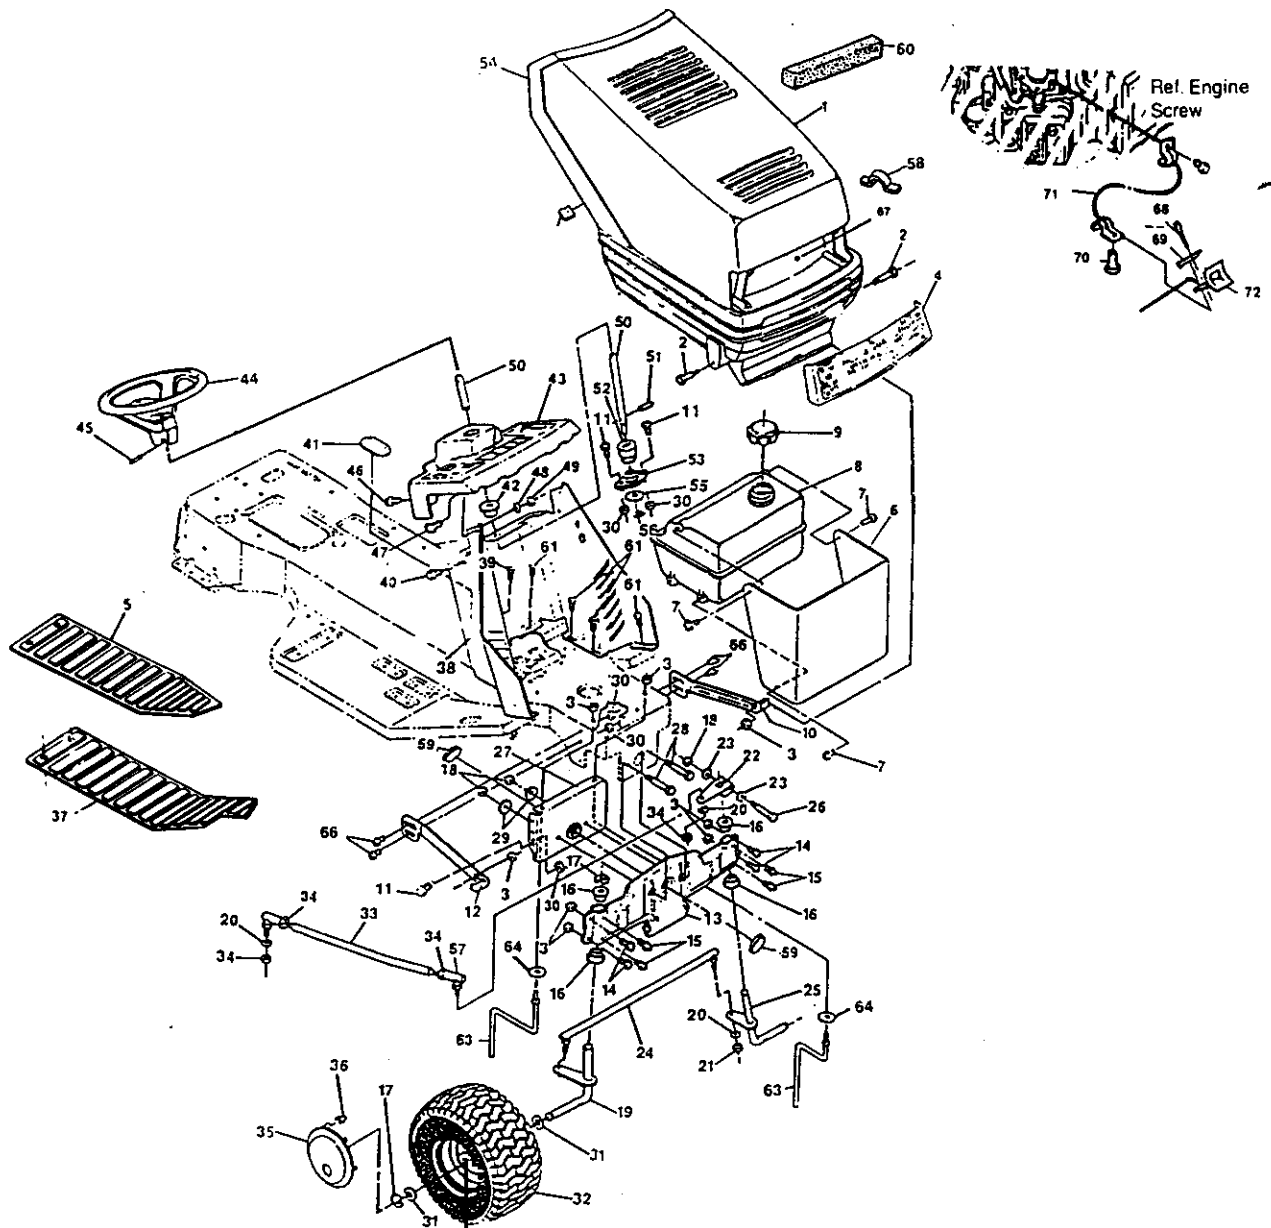


5333144-16 holkki

Key No.	Part No.	Description
1	5333065-05	Hood
2	5330250-86	Shoulder Bolt, 5/16 - 18 Thd.
3	5330014-98	Nut, Hx, Ctrik, 5/16-18 Thd.
4	5333040-79	Lens, Headlight
5	5333057-21	Assembly, Foot Pad L. H.
6	5333071-11	Heat Shield
7	5333003-03	Screw, Hx Hd, Plastite 1/4 Dia. x 3/4 In.
8	5333098-53	Tank, Gas 1.5 Gal WO/ Sensor
9	5330125-01	Cap, Fuel
10	5333028-09	Bracket, Hood L. H.
11	5330560-30	Screw, Hx Hd, 5/16 - 18 x 3/4 In.
12	5333028-10	Bracket, Hood R. H.
13	5333052-82	Front Axle W/Bearings
14	5331202-28	Screw, Hx Hd, 5/16-18 x 5/8 In.
15	5330007-06	Grease Fitting
16	5333023-03	Bearing, Spindle
17	5330366-25	E-Ring
18	5330014-99	Nut, Hx, Ctrik, 3/8 - 16 Thd
19	5333023-16	Spindle, R. H.
20	5331203-82	Washer, Split, Lock 3/8 In.
21	5331203-69	Nut, Hx, 3/8-24 Thd
22	5333023-06	Steering Arm, Upper
23	5339964-16	Washer, Flat, 25/64 In.
24	5333003-28	Assembly, Tie Rod
25	5333023-15	Spindle, L.H.
26	5331801-34	Screw, Hx Hd, 3/8-16 x 2-1/2 In

Key No.	Part No.	Description
27	5333023-21	Support Bracket, Front Axle
28	5331222-07	Screw, Hx Hd, 3/8-16 x 3 In.
29	5330024-83	Washer, Spring
30	5330552-73	Nut, Hx, Wd Fl Lk 5/16-18 Thd.
31	5330006-42	Washer, Flat, 3/4 In.
32	5333011-40	Tire
	5333158-76	Wheel With Bearing
	5320599-04	Tube
	5330241-67	Valve Stem
	5333144-16	Bearing
33	5333029-07	Drag Link
34	5331249-25	Nut, Hx, Jam, 3/8-24 Thd.
35	5333065-59	Hubcap, Front
36	5333066-69	Clip, Hubcap
37	5333057-22	Assembly, Foot Pad R. H.
38	5333023-31	Dash, Lower
39	5330452-63	Screw, Tap, 5/16-18 x 3/8 In.
40	5339953-46	Screw, Self-Tap, 1/4-20 x 1/2 In
41	5333052-80	Cover
42	5333032-28	Bushing, Upper Steering
43	5333074-53	Dash, Upper
44	5333031-32	Steering Wheel
45	5334563-78	Pin, Spring, 1/4 x 2 In
46	5333058-50	Screw, Tap, 1/4-20 x 1 2 In
47	5331208-54	Screw, Hx Hd, 1/4-20 x 5/8 In.
48	5331203-92	Washer, Flat, 9/32 In.

Key No.	Part No.	Description
49	5330015-02	Nut, Hx, Ctrik, 1/4-20 Thd
50	5333023-07	Shaft, Steering
51	5333025-24	Pin, Dowel
52	5333023-14	Pinion, Steering
53	5333024-98	Bearing, Flange
54	5330126-75	Trim Piece
55	5330029-68	Washer, Flat, 1/2 In.
56	5330208-64	E-Ring
57	5330571-58	Ball, Joint, 3/8 Thd
58	5330414-82	Press Clip
59	5333071-12	Plug, Front Axle
60	5333081-15	Foam, Hood Baffle
61	8174905-08	Screw, 5/16-18 x 1/2 In
63	5333004-40	Belt Guide
64	5331385-38	Washer, Internal Tooth
65	5333068-22	Clip
66	5330536-52	Screw, Hex Fl, 5/16-18 x 3/4 In.
67	5333082-00	Decal, Reflector
68	5331212-22	Cotter Pin
69	5331212-23	Cotter Pin
70	5331380-77	Clevis Pin
71	5333107-49	Hood Lanyard
72	5333107-50	Hood Lanyard Anchor


* Order Individual Parts

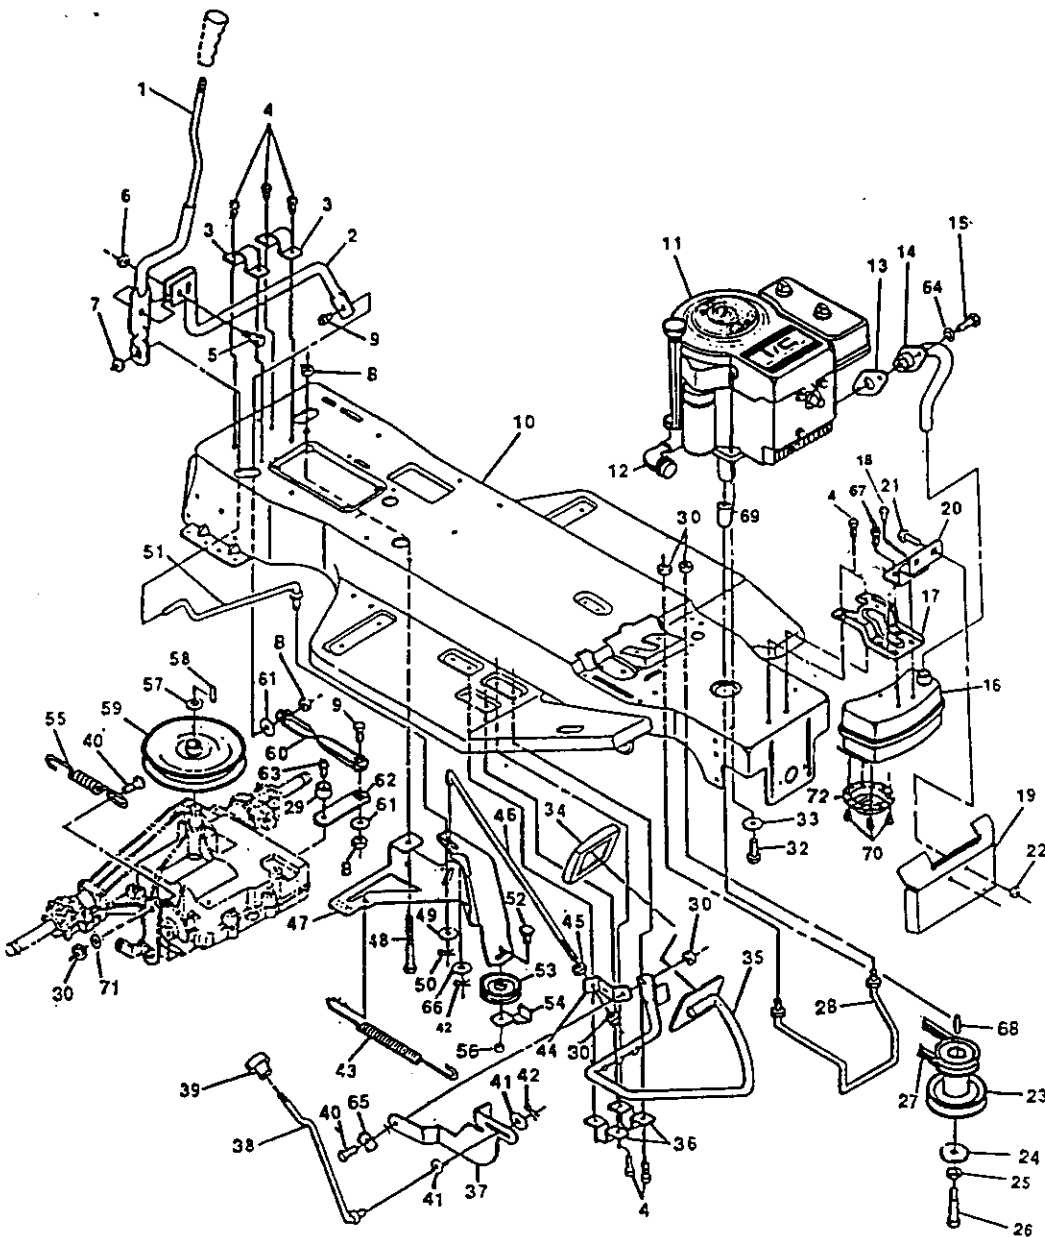

Key No.	Part No.	Description
1	5333040-25	Tube Assembly, Shift Pivot
2	5333040-24	Tube Assembly, Shift
3	5333214-23	Clip, Shift Lever
4	5333054-97	Screw, Hx Hd, Wshr Tap, 5/16-18 x 1/2 In.
5	5333040-86	Shoulder Bolt, 1/4-20
6	5330015-02	Nut, Hx, Ctrk, 1/4-20 Thd.
7	5330710-46	Nut, Hx, Nylon, Lock 3/8-16 Thd.
8	5330014-99	Nut, Hx, Ctrk, 3/8-16 Thd.
9	5331221-45	Screw, 3/8-16 x 1-1/4 In.
10	5333228-08	Main Frame #
11		Engine 12 Horsepower B&S
12	5331113-16	Elbow, 90 Degree
13	5330467-08	Gasket, Muffler
14	5333052-79	Exhaust Tube
15	5331800-77	Screw, Hx Hd, 5/16-18 X 3/4 In.
16	5333052-78	Muffler
17	5333047-09	Bracket Muffler
18	5339953-46	Screw, Hx Hd, Tap 1/4-20 X1/2 In.
19	5333078-31	Heat Shield, Muffler
20	5333030-96	Bracket, Transaxle
21	5331262-11	Bolt, Carriage, 5/16-18 X 5/8 In
22	5330552-73	Nut, Hx, Wd Fl, Lk 5/16-18 Thd
23	5333065-90	Pulley Assembly, Engine

Key No.	Part No.	Description
24	5330564-31	Washer, Pilot
25	5331203-83	Washer, Split, Lock 7/8 In.
26	5334286-44	Screw, Hx Hd, 7/16-20 X 5 In.
27	5333032-41	V-Belt, 90 In. Long
28	5333101-62	Belt Guide
29	5330571-57	Washer, Special
30	5330014-98	Nut, Hex, Ctrk, 5/16-18 Thd.
32	5330509-47	Screw, Hx Hd Tap, 3/8-16 X1-1/4 In.
33	5331384-89	Washer, 3/8 In.
34	5333023-35	Pad, Clutch/Brake, Molded
35	5333023-19	Assembly, Clutch/Brake Arm
36	5333214-24	Bracket, Clutch/Brake Arm
37	5333214-17	Lever, Park Brake
38	5333042-17	Rod, Parking Brake
39	5333043-67	Knob, Park Brake
40	5330250-86	Shoulder Bolt, 5/16-18 Thd.
41	5331203-85	Washer, 9/16 In.
42	5331212-23	Cotter Pin
43	5333042-09	Spring, Clutch
44	5333041-25	Bracket, Brake Rod
45	5332711-84	Nut, Hx, Keys, 5/16-18 Thd
46	5333042-12	Rod, Clutch
47	5333040-49	Arm, Idler
48	5330511-89	Shoulder Bolt, 3/8-16 Thd
49	5332745-17	Washer, Flat, 13/32 In.

Key No.	Part No.	Description
50	5330363-68	Hairpin
51	5333040-83	Rod, Shift-On-The-Go
52	5330573-25	Carnage Bolt, 3/8-16 x 2 In
53	5330402-23	Idler Sheave, Backside
54	5333041-05	Belt Retainer
55	5333041-30	Spring, Brake
56	5330451-71	Nut, Flange, 3/8-16 Thd
57	5330220-53	Retaining Ring
58	5330030-21	Key, Woodruff, #606
59	5333031-09	Pulley
60	5333095-46	Shift Link
61	5331203-94	Washer, Flat, 13/32 In
62	5333125-94	Shift Lever, Transaxle
63	5330562-55	Screw, Hx Hd, 1/4-28 X 3/4 In
64	5331206-38	Washer, Split Lock, 5/16 In.
65		Washer, Wave
66	5331203-92	Washer, Flat
67	5339953-38	Screw, Hex Hd Tap, 1/4 20 x 5/8 In.
68	5330577-91	Key, Square 1/4
69	5333042-46	Spacer, Engine Pulley
70	5330352-87	Screw, Hx Wa Hd, #8-32 x 3-8 In.
71	5333081-88	Washer
72	5330564-72	Deflector

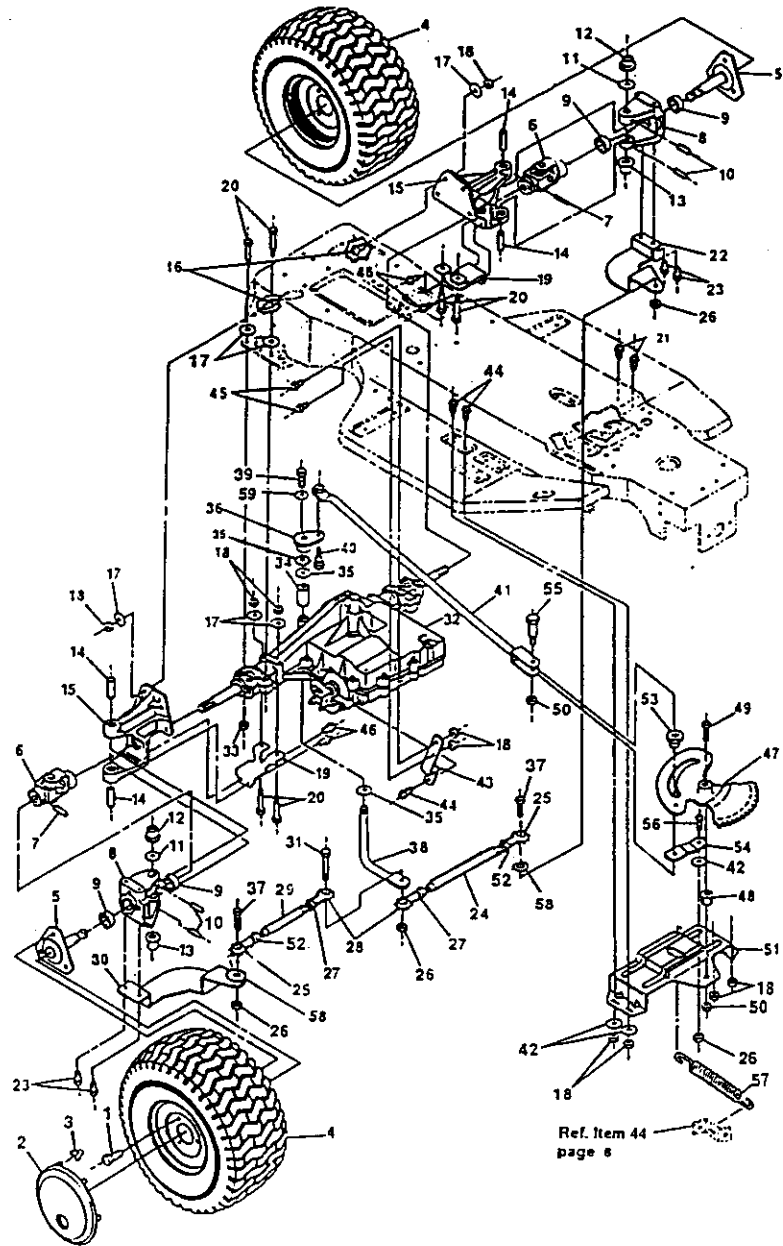


Key No.	Part No.	Description
1	5331234-18	Screw, Hx Hd, 1/2-20 x 1/2 In.
2	5333065-60	Hubcap, 8 In.
3	5333066-69	Clip, Hubcap
4*		Wheel & Tire Assembly, Rear
	5330582-76	Tire
	5330124-67	Wheel
	5310201-87	Tube
	5330241-67	Valve Stem
5	5330122-80	Hub Assembly
6	5333205-31	U-Joint Assembly
7	5330363-11	Pin, Grooved, 1/4 x 1-1/2 In.
8	5330124-65	Bracket, Steering Pivot, Outer
9	5330123-25	Bearing
10	5334567-22	Pin, Spring, 1/4 x 1-1/2 In.
11	5330216-82	Washer, Flat
12	5330122-88	Bushing, Shouldered
13	5330123-21	Bushing, Shouldered
14	5330122-89	Pin, Steering Hinge
15	5330124-85	Bracket, Steering Pivot, Inner
16	5331220-17	Screw, Hx Hd, 5/16-18 x 1 In.
17	5331203-93	Washer, Flat, 11/32 In.
18	5330014-98	Nut, Hx, Ctrik, 5/16-18 Thd.
19	5333032-22	Bracket, Transaxle Mounting
20	5331800-89	Screw, Hx Hd, 5/16-18 x 2-1/4 In.

Key No.	Part No.	Description
21	5330354-97	Screw, Tap, 5/16-18 x 1/2 In.
22	5333041-21	Arm, Rear Wheel Steer, L. H.
23	8747606-16	Screw, Self-Tap, 3/8-16 x 1 In.
24	5333084-46	Tie Rod, L. H.
25	5333083-84	Tie Rod End, L. H.
26	5334123-49	Nut, Hex, Ctrik, 3/8-24 Thd.
27	5331249-25	Nut, Hex, Jam, 3/8-24 Thd.
28	5333042-60	Rod End, R. H.
29	5333084-47	Tie Rod End, R. H.
30	5333041-20	Arm, Rear Wheel Steer, R. H.
31	5331816-46	Screw, Hx Hd, 3/8-24 x 1-3/4 In.
32		Transaxle
		Peerless Dealer
33	5330441-08	Nut, Hx, Wd Fl, Lk, 5/16-18 Thd.
34	5333041-15	Spacer
35	5330251-77	Washer, Flat, 49/64 In.
36	5333087-19	Steering Pivot
37	5331816-46	Screw, Hx Hd, 3/8-24 x 1-3/4 In.
38	5333087-20	Shaft, Steering Pivot
39	5334210-51	Screw, 5/16-24 x 1 In.
40	5330123-19	Bolt, Shoulder, 3/8-24 Thd.
41	5333025-93	Rod Assembly, Rear Wheel Steer
42	5334463-63	Washer, Flat, 3/8 In.

Key No.	Part No.	Description
43	5333213-82	Bracket, Transaxle Stabilizer
44	5330354-98	Screw, Hx Hd, Self-Tap, 5/16-18 x 3/4 In.
45	5331202-28	Screw, Hx Hd, 5/16-18 x 5/8 In.
46	5334518-14	Screw, Hx Hd, Self-Tap, 5/16-18 x 5/8 In.
47	5333028-77	Assembly, Sector Gear
48	5333028-78	Bushing, Sector Gear
49	5333042-96	Screw, Hx Hd, 1/2-20 x 2-3/8 In.
50	5332746-54	Nut, Hx, Ctrik, 1/2-20 Thd.
51	5333025-83	Plate, 4-Wheel Steer Pivot
52	5333083-99	Nut, Jam, 3/8-24 Thd.
53	5333041-16	Cam Yoke Roller
54	5333025-94	Arm, Roller Swing
55	5333041-22	Shoulder Bolt, Cam Roller
56	5333025-88	Shoulder Bolt, Cam Follower
57	5330354-10	Spring, Clutch/Brake Pedal Return
58	5331203-82	Washer, Split Lock
59	5330456-02	Washer, Flat


* Order Individual Parts

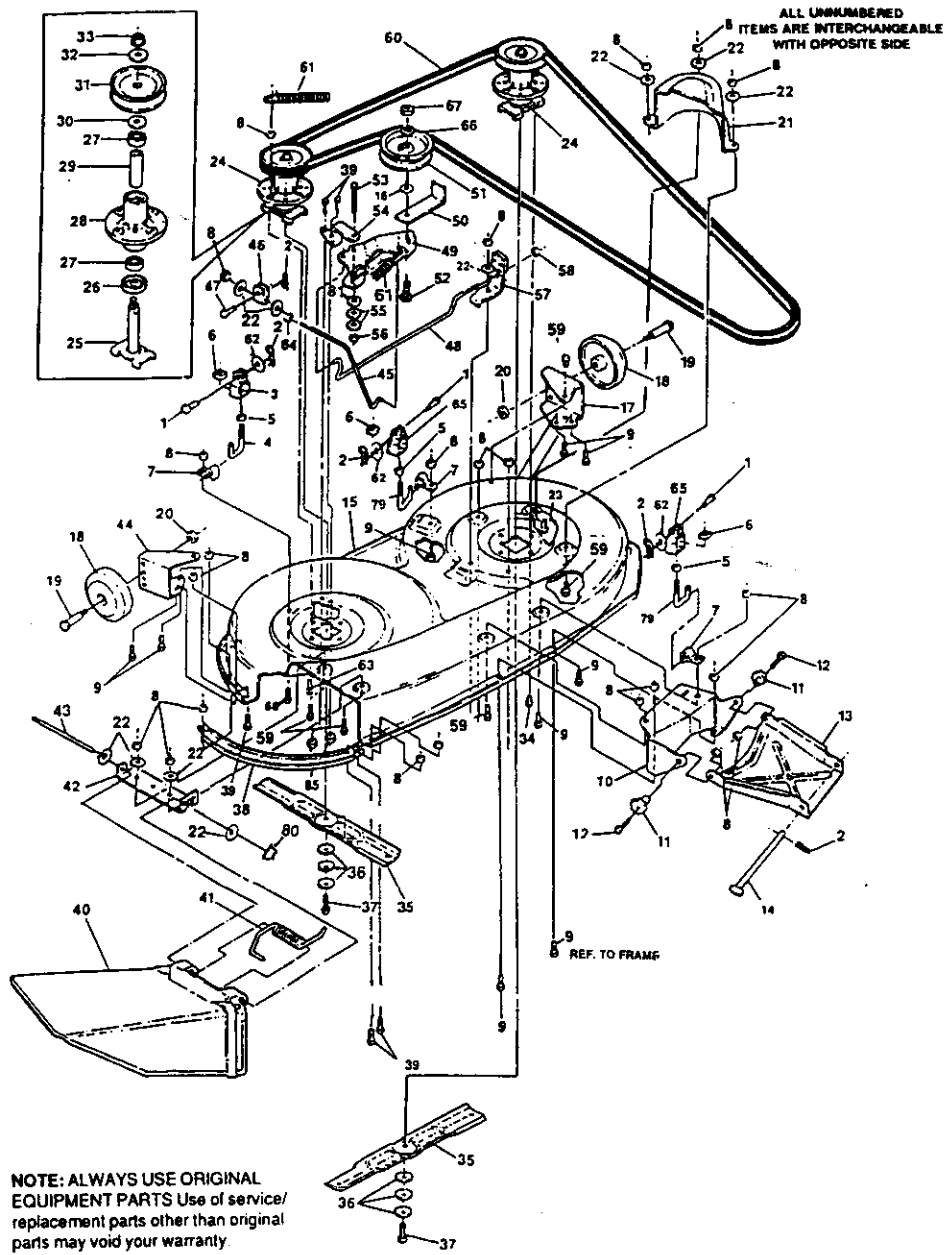

Key No.	Part No.	Description
1	5333003-17	Pin, Clevis
2	5330561-80	Hairpin, Cotter
3	5333030-50	Clevis
4	5333096-15	Lift Rod
5	5331202-38	Nut, Hx Jam 1/2-13 Thd.
6	5331095-27	Nut, Sq. 1/2-13 Thd.
7	5333021-97	Clip
8	53330014-98	Nut, Hx, Lock 5/16-18 Thd.
9	5331800-75	Screw, Hx Hd. 5/16-18 x 1 In.
10	5333093-16	Bracket, Front
11	5330582-47	Nut, Adjusting
12	5331800-79	Screw, Hx Hd. 5/16-18 x 1 In.
13	5333108-00	Channel, Draw Bar
14	5333029-63	Rod, Drawbar
15	5333221-14	Mower Deck
16	5334463-63	Washer, Flat
17	5333044-26	Wheel Bracket, L. H.
18	5333026-11	Wheel
19	5330237-63	Shoulder Bolt, 3/8-16 Thd.
20	53330014-99	Nut, Hex, Ctrk, 3/8-16 Thd.
21	5333028-33	Belt Cover, Left Pulley
22	5331203-93	Flatwasher, 11/32 In.
23	5331202-28	Screw, Hx Hd, 5/16-18 x 5/8 In.
24	5330564-24	Quill Assembly (Incl. Nos. 25-33)

Key No.	Part No.	Description
25	5330564-25	Saddle & Shaft Assembly
26	5330506-16	Dust Shield
27	7382203-19	Bearing
28	5330555-47	Quill Casting
29	5330508-18	Spacer Tube
30	5330514-49	Spacer
31	5330563-90	Pulley
32	5330563-65	Washer
33	5330012-82	Nut, Wd Fl, Lk 7/16-20 Thd.
34	5330506-34	Screw, Wshr Hd, 5/16-18 x 7/8"
35	5333050-12	Blade Std.
35 b	5333159-12	Blade High-lift
36	5330024-83	Washer, Spring
37	5330395-73	Screw, Hx Hd, 3/8-24 x 1 In.
38	5333041-02	Toe Guard
39	5331800-77	Screw, Hx Hd, 5/16-18 x 3/4 In.
40	5333044-22	Chute Deflector
41	5333149-75	Spring
42	5333023-64	Bracket, Chute Mount
43	5333044-24	Rod, Chute
44	5333041-73	Wheel Bracket, R. H.
45	5333030-72	Clutch Rod
46	5333030-74	Clevis, Clutch
47	5330493-32	Pin, Clevis
48	5333027-14	Rod, Brake

Key No.	Part No.	Description
49	5333221-20	Idler Assembly
50	5333008-44	Belt Retainer
51	5333103-26	Idler Pulley
52	5330573-25	Carriage Bolt, 3/8-16 x 2 In.
53	5333044-20	Shoulder Bolt, 3/8-16 x 3/4 In.
54	5333023-63	Idler Brace
55	5339964-16	Washer, Flat
56	5330451-71	Nut, Hx, Wd Fl, 3/8-16 Thd.
57	5333041-18	Brake Spring Assembly
58	5330015-02	Nut, Hx, Ctrk, 1/4-20 Thd.
59		Bolt, 5/16-18 x 5/8 In.
60	5330480-44	Belt, 82 In. Long
61	5330354-10	Spring
62	5332745-17	Washer, Flat, 13/32 In.
63	5333003-45	Screw, Tap 5/16-18 x 1-3/8 In.
64	5331203-76	Nut, Hx, 5/16-18 Thd.
65	5333023-68	Clevis
66	5331203-82	Washer, Split, Lock 3/8 In.
67	5331203-77	Nut, Hx 3/8-16 Thd.
68	8747605-10	Bolt, 5/16-18 x 5/8 In.
79	5333123-02	Lift Rod
80	5330035-35	Push Nut
81	5339963-07	Flatwasher
85	5330441-08	Nut, 5/16 - 18

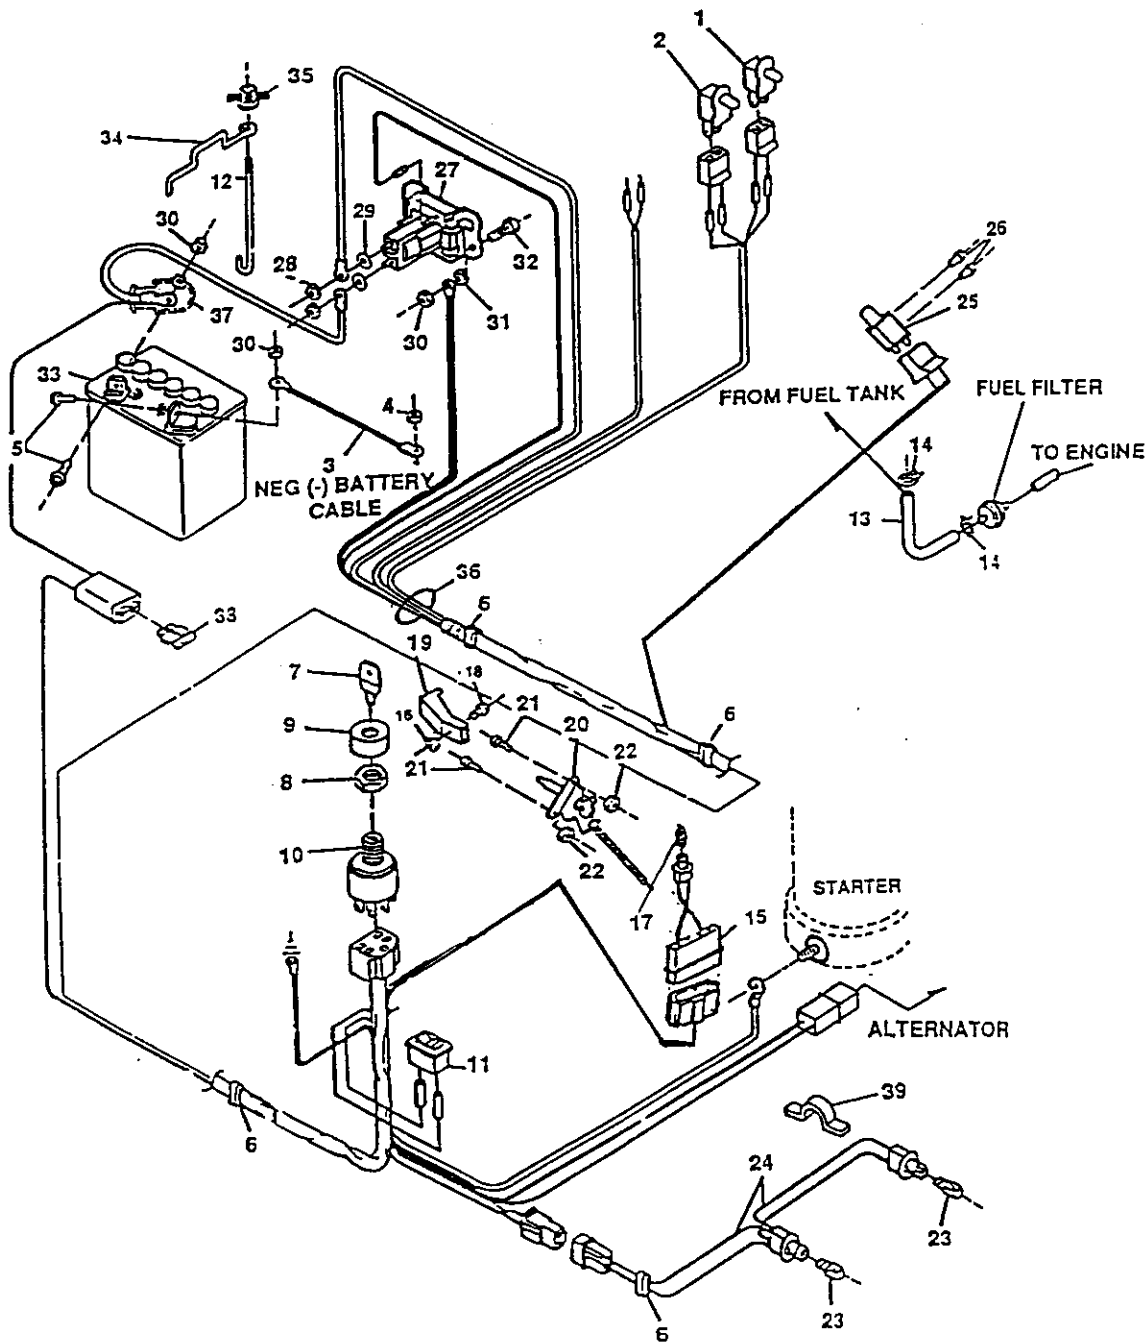

Key No.	Part No.	Description
1	5333081-87	Seat Switch
2	5330125-53	Deck Safety Switch
3	5330555-11	Cable, Battery, Negative
4	5332711-84	Nut, Hx, Keps, 5/16-18 Thd.
5	5331208-54	Screw, 1/4-20 x .63 HHC
6	5330574-44	Tie Cable
7	5168446-00	Key, Ignition Switch
8	5333001-93	Nut, Switch
9	5333001-94	Boot, Switch
10	5333057-20	Switch, Ignition
11	5321107-12	Switch, Light
12	5330575-51	Rod, Battery Hold-Down
13	5066642-01	Gas Line, 600 mm (cut to length)
14	5330486-72	Clamp, Gas Line
15	5333057-02	Lamp Holder 4 Pin
16		Nut, Hex, #8-32 Thd.
17	5330577-69	Bulb Indicator
18		Screw, Ph Pn, #8-32 x 3/8 In.
19	5333044-39	Knob, Throttle Control
20	5333157-16	Throttle Control

Key No.	Part No.	Description
21	5331599-43	Screw, #10-24 X 5/8 In
22	5333084-59	Nut, Hx, Nylon Lock, #10-24 Thd.
23	5330525-72	Bulb Headlamp
24	5333030-64	Assembly, Light Wire
25	5330572-11	Switch
26	5330572-20	Screw, Pn Hd, Tap #12 x 1/2 In
27	5330537-16	Solenoid
28	5331203-68	Nut, Hx 5/16-24 Thd.
29	5331384-85	Washer, Lock 5/16 In.
30	5332711-72	Nut, Hx, Keps, 1/4-20 Thd.
31	5330015-02	Nut, Hx, Ctrk, 1/4-20 Thd.
32	5331877-45	Screw, 1/4-20 X 3/4 In.
33	5067888-01	Battery
34	5333029-12	Bracket, Battery Hold-Down
35	5333100-67	Wingnut
36	5333156-91	Wiring Harness
37	5333082-01	Boot, Rubber (Battery Cable)
38	5333020-31	Fuse, 15A-32V
39	5330414-82	Press Clip